

EXPERIMENT-14

14. | Write a code using RAW sockets to implement packet sniffing.

packet_sniffer.py

```
import socket

HOST = socket.gethostbyname(socket.gethostname())

sniffer = socket.socket(socket.AF_INET, socket.SOCK_RAW, socket.IPPROTO_IP)

sniffer.bind((HOST, 0)) sniffer.setsockopt(socket.IPPROTO_IP,
socket.IP_HDRINCL, 1)


print("Packet Sniffer Started")

print("Listening on:", HOST) print("Press
Ctrl+C to stop")

try:
    while True:
        data, address = sniffer.recvfrom(65535)
        print("Source IP:", address[0])    print("Packet
Size:", len(data), "bytes")    print("-" * 40)
except KeyboardInterrupt:
    print("\nPacket Sniffer Stopped")

finally:
    sniffer.close()
```

EXPERIMENT-14

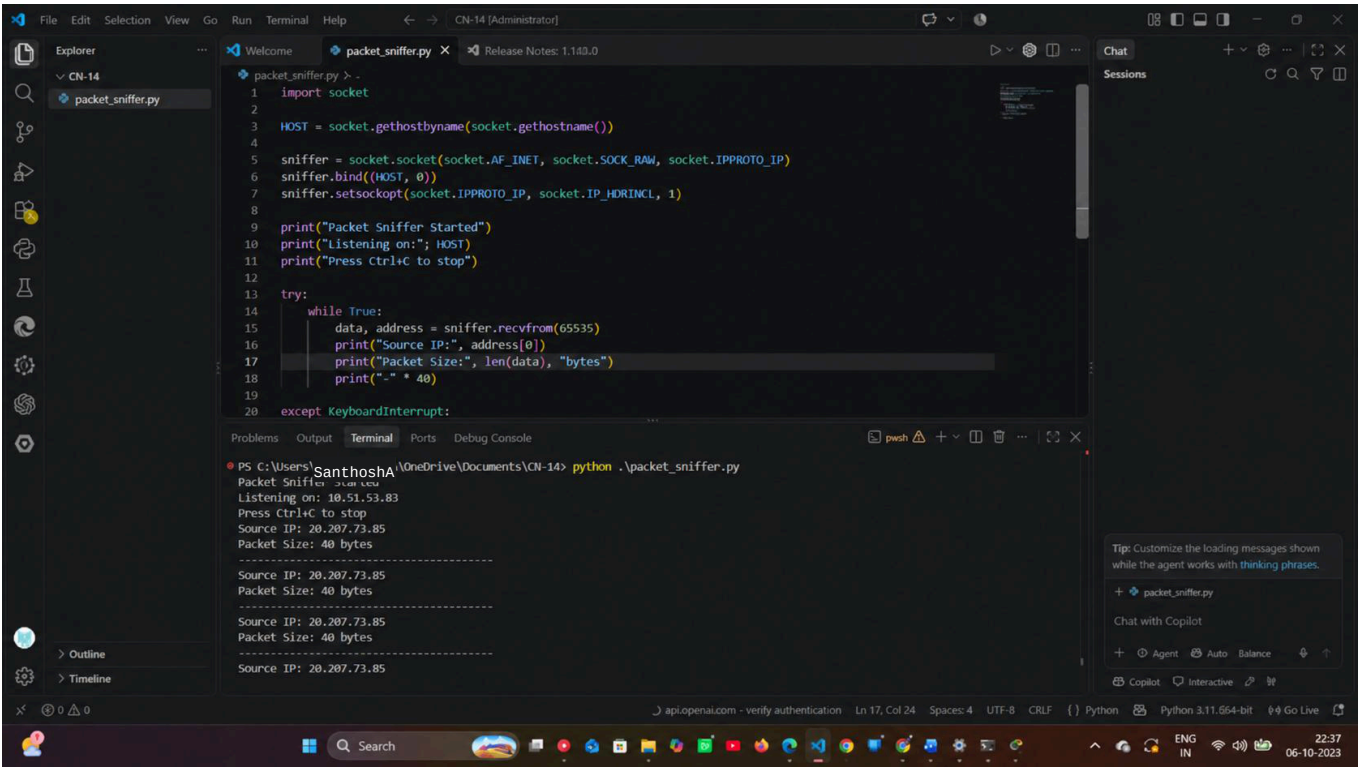

EXPERIMENT-14

